



Chromebook Quick Start Guide

Logging in with your Google account

You can log into the Chromebook with your APS provided Google account. When you log in with your Google account, you can conveniently use Google services such as Gmail, Google Calendar, Google Docs and so on. In addition, since your saved bookmarks and browser settings are saved in the Google account.

- 1. Enter your APS Gmail email address and password.
- 2. To add a user, click Add User



- 3. Click Login.
- 4. When you have completed the login, the **Desktop** appears. You can use the Chrome and various apps by clicking



the icons of the bottom left of the screen.

Keyboard

Shortcut key functions and procedures are discussed in the following sections.

Shortcut Keys Here is an overview of the shortcut keys on the top row of the keyboard.		
Shortcut Keys	Function	
+	Go to the previous page in your browser history.	
→	Go to the next page in your browser history.	
C	Reload your current page.	
	Open your page in full-screen mode	
	Switch to your next window.	
۲	Decrease screen brightness.	
*	Increase screen brightness.	
	Mutes the sound.	
M.	In Mute mode, press the key to cancel the Mute	
	function.	
	Decrease the volume.	
	Increase the volume.	

Screenshots

Screenshot of the entire screen - Ctrl +

Select the area for a Screenshot - Ctrl + Shift + *



To see downloads Ctrl + m

Network

Connecting to a Network

1. Click the network icon at the bottom right

to view the list of available Wireless Networks.

2. To connect to a network, simply select its name in the network menu.



3. Double click the network, type the password then press "Connect"

Join Wi-F	i network	×
SSID:	Linksys	
Password:	*****	0
	Share this network with other users	
	Connect Cancel	l

4. If the connection is successfully established, the network icon is displayed as



5. If that did not work then you'll have to manually connect to the wireless network. Click on "Join Other".

Int	Internet connection				
	R	Wi-Fi network			
	F				
		Join other			
		Preferred networks			
		Disable Wi-Fi			

6. Fill out the SSID + Password fields and select the Security type.

Join Wi-Fi network		
SSID:		
Security:	None 💌	
Password:		0
	\checkmark Share this network with other users	
Advance	d Connect Can	cel