


- 1. Volume mute button
- 2. Volume scroll
- 3. Integrated microphone
- 4. RJ-11/modem port
- 5. Optical drive
- 6. Media Card Reader
- 7. 2 USB 2.0 ports
- 8. HP Fingerprint Sensor
- 9. Integrated stereo speakers
- 10. Touchpad with scroll zone

- 12. Hard drive activity
- 13. Battery charging LED
- 14. Power/standby LED
- 15. Wireless on/off LED
- 16. Power button with LED
- 17. HP Info / HP QuickLook button
- 18. Wireless on/off button with LED indicator
- 19. HP Presentation button with LED indicator
- 20. WLAN antennas (with WLAN option)
- 21. WWAN antennas

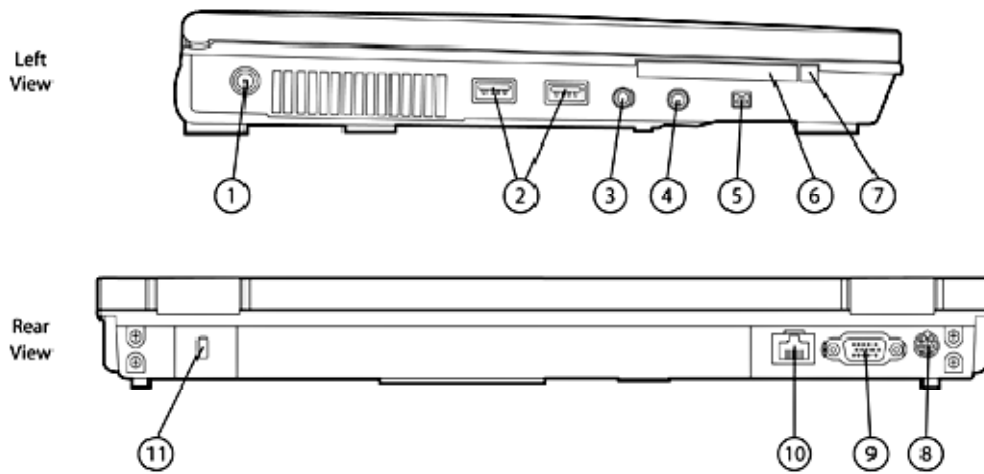

- | | |
|------------------------------|-----------------------------------|
| 1. Power connector | 7. PC Card eject button |
| 2. 2 USB 2.0 ports | 8. S-Video TV out |
| 3. Stereo headphone/line out | 9. VGA/external monitor connector |
| 4. Stereo microphone in | 10. RJ-45/Ethernet port |
| 5. 1394a port | 11. Kensington Lock slot |
| 6. Type I/II PC Card slot | |